

AllStyle

STYLEQUEST MULTI-POSITION COILS

STANDARD FEATURES

Multi-Position
Up-flow horizontal right or
Up-flow horizontal left
Order your desired configuration.

Fully insulated embossed
galvanized cabinet
Polymer drain pans (two)
Dual drain connections on
each drain pan
Heavy copper tube with
aluminum fins

Aluminum end plates are standard
Cap-Flowrator refrigerant
metering

OPTIONAL FEATURES

Thermal expansion valves
Powder Painted Cabinet
Heat pump application

Specify StyleQuest cabinet when
ordering.
Specify right or left drain and
refrigerant




CABINET DIMENSIONS

Cabinet Code	Cabinet Length H			Cabinet Height F	Cabinet Width S	Opening Height W	Opening Width D
	Coils 10 - 14 "	Coils 16 - 18"	Coils 20 - 24"				
Q5	21.25"	25.25"	28.25"	14.50"	21.50"	13.25"	20.25"
Q5G	21.25"	25.25"	28.25"	14.00"	21.50"	12.25"	20.25"
Q6	21.25"	25.25"	28.25"	16.50"	21.50"	15.25"	20.25"
Q6R	21.25"	25.25"	28.25"	17.50"	21.50"	15.75"	20.25"
Q6A	21.25"	25.25"	28.25"	17.75"	21.50"	16.50"	20.25"
Q8	21.25"	25.25"	28.25"	21.25"	21.50"	20.00"	20.25"
Q8G	21.25"	25.25"	28.25"	21.00"	21.50"	19.25"	20.25"
Q8Y	21.25"	25.25"	28.25"	22.25"	21.50"	21.00"	20.25"
Q8A	21.25"	25.25"	28.25"	24.75"	21.50"	23.50"	20.25"
Q9G	21.25"	25.25"	28.25"	24.50"	21.50"	22.75"	20.25"

Specifications can change without notice.

AllStyle

STYLEQUEST MULTI-POSITION COILS

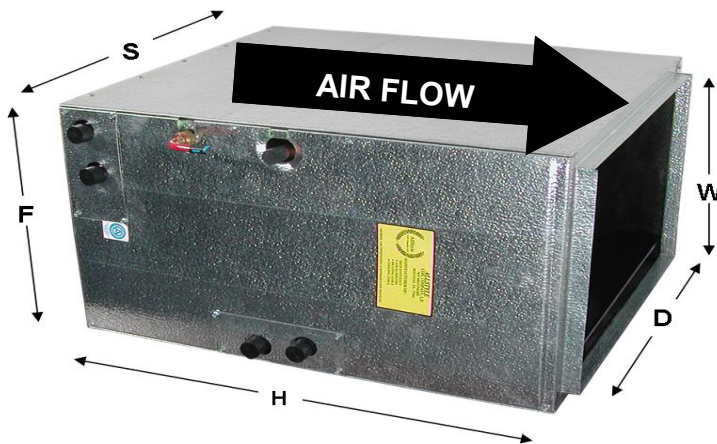

INSTALLATION INSTRUCTIONS

The StyleQuest coil is a multi-position coil for up-flow or horizontal use. The coil is designed for either horizontal right or horizontal left applications, but not for both. Air should enter the base of the coil and not the apex. All Style-Quest coils will install in the up-flow position.

A drip shield must be installed on StyleQuest coils which have a coil that is greater than 22" in length. Attach the supplied drip shield to the end of the drain pan at the discharge end of the coil. The coil must be installed in a level position.

IT IS NOT RECOMMENDED THAT AIR ENTER THE APEX END OF THE COIL!

A red arrow on the coil indicates correct airflow direction for horizontal installations.

CABINET DIMENSIONS

Cabinet Code	Cabinet Length H			Cabinet Height F	Cabinet Width S	Opening Height W	Opening Width D
	Coils 10 - 14 "	Coils 16 - 18"	Coils 20 - 24"				
Q5	21.25"	25.25"	28.25"	14.50"	21.50"	13.25"	20.25"
Q5G	21.25"	25.25"	28.25"	14.00"	21.50"	12.25"	20.25"
Q6	21.25"	25.25"	28.25"	16.50"	21.50"	15.25"	20.25"
Q6R	21.25"	25.25"	28.25"	17.50"	21.50"	15.75"	20.25"
Q6A	21.25"	25.25"	28.25"	17.75"	21.50"	16.50"	20.25"
Q8	21.25"	25.25"	28.25"	21.25"	21.50"	20.00"	20.25"
Q8G	21.25"	25.25"	28.25"	21.00"	21.50"	19.25"	20.25"
Q8Y	21.25"	25.25"	28.25"	22.25"	21.50"	21.00"	20.25"
Q8A	21.25"	25.25"	28.25"	24.75"	21.50"	23.50"	20.25"
Q9G	21.25"	25.25"	28.25"	24.50"	21.50"	22.75"	20.25"

Specifications can change without notice.

AllStyle Coil Co., L.P. 7037 Brittmore, Houston, Texas 77041 • 713 466 6333 • FAX 713 466 6363 • www.allstyle.com